

Thank you for purchasing the KRG Enclosed forend! We hope that you enjoy using it.

INST-TUB-T3S

Enclosed Forend for Tikka T3 Chassis



Contents of Package:

- Enclosed Forend, assembled
- Baggie with following contents:
 - 1ea Sling/Bipod stud
 - 2ea button head M5 x 20mm screws
 - 2ea flat head M4 x 12mm screws
 - 2ea flat head M4 x 20mm screws
 - 1ea Nylon washer for stud
 - 4ea flat M5 nut for mounting accessories
 - 1ea KRG L2 polymer rail kit
 - 1ea T-slot mounting block (T3 forend only)





Safety Warning: Before you attempt any installation, make sure your rifle is unloaded. Also, before starting remove the bolt and magazine from the rifle.

Installation Instructions:


Step 1: Remove forend from stock.

Step 2: Slide mounting block into T-slot channel in backbone with holes facing forward as shown:

Step 3: Slide forend onto backbone as shown.

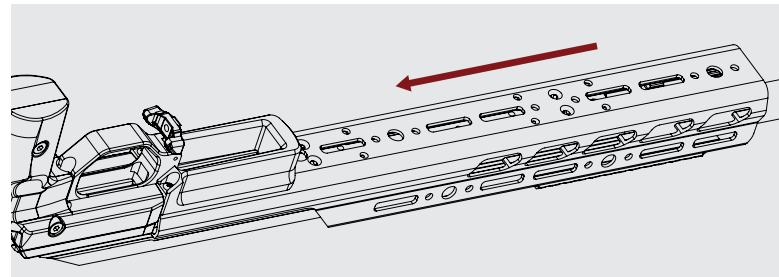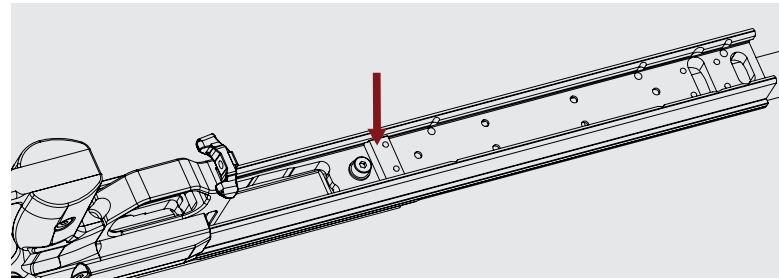

Step 4: Install screws. Typical installation uses flat head M4 x 20mm screws in front attaching into backbone and flat head M4 x 12mm screws attaching into mounting block. Alternate installation can use flat head M4 x 20mm screws in front and button head M5 x 20mm screws in rear attaching into backbone as shown.

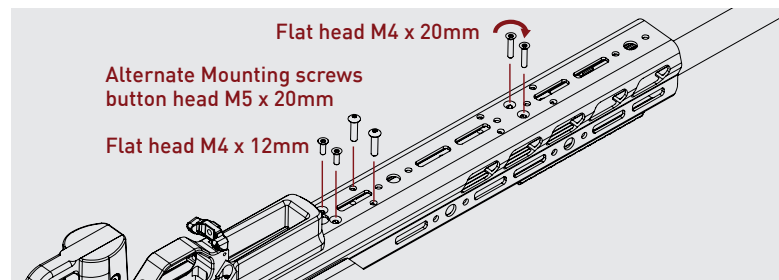

Forend Mounting points:

