

Thank you for purchasing our Arca Spigot Mount! We hope that you enjoy using it.

INST-SPG-ARC

Arca Spigot Mount

for W-3/X-Ray/Bravo



Contents of Package:

- Spigot Mount
- Baggie with following contents:
 - 6ea M4 x 14mm Socket Head Screw (4 for mounting, 2 for limiting rotation of Harris bipod if needed)
 - 1ea Slings/Bipod Stud
 - 1ea M6 Washer for Stud
 - 1ea M5 Nylon Washer for Stud


Installation Instructions:



Safety Warning: Before you attempt any installation, make sure your rifle is unloaded. Also, before starting remove the bolt and magazine from the rifle.

Step 1: Remove forend from stock.

Step 2: Place spigot mount into position and install the 4x M4 x 14mm mounting screws through the spigot mount and into the threaded holes in the "backbone" of the chassis. Re-install forend; you are done.

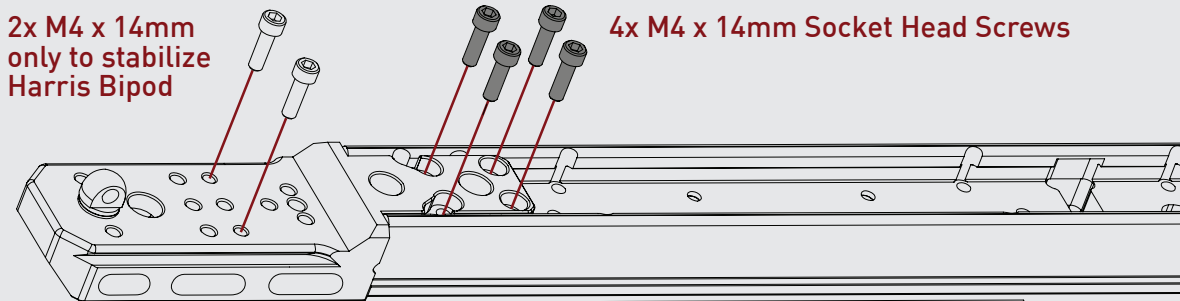

Spigot Mount hole descriptions:

