

Thank you for purchasing our Enclosed Forend! We hope that you enjoy using it.



Enclosed Forend

Installation Instructions:



Safety Warning: Before you attempt any installation, make sure your rifle is unloaded. Also, before starting remove the bolt and magazine from the rifle.





Step 1: Remove the existing screws holding your current forend in place. These are either metric button head M5 screws or socket head M5 screws depending on the chassis and generation.

Step 2: We recommend that you install the accessories that you want to use on the forend before you put the forend onto the chassis. The rectangular slots on the forend are MLoK compatible so they are accessible even with the forend installed. However some of the round mounting hole positions are difficult. Use the included flat M5 nuts to install accessories that are non-MLoK.

Step 3: With barreled action still installed in the chassis, slide the tube forend over the front of the barrel until it butts up against the grip panels of the rear stock.

Step 4: Insert and tighten new forend screws included with tube forend. You may want to put on some blue loctite to help them hold. Note that the forend can be shifted forward and rearward a small amount just like the original forend to tailor the magazine fit.

Step 5: If you experience some issues with the forend sliding during firing, you can add in these extra mounting screws that are included with the forend. They are button head M5 x 20mm.

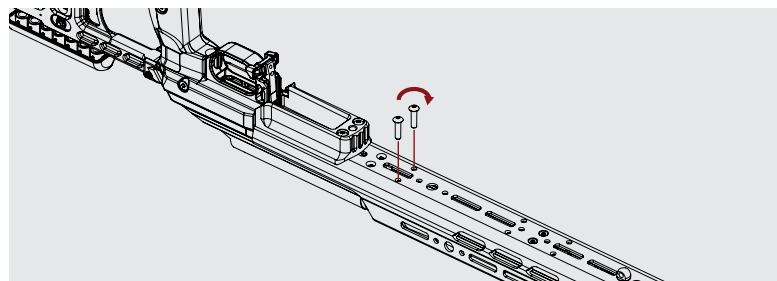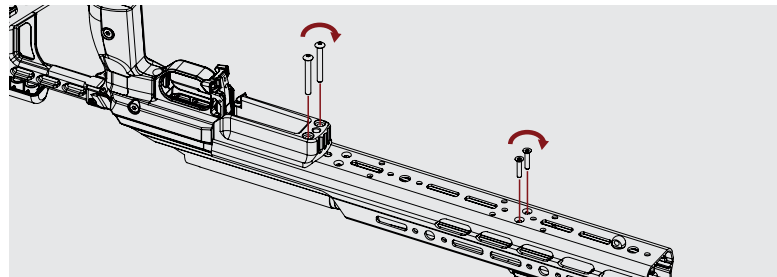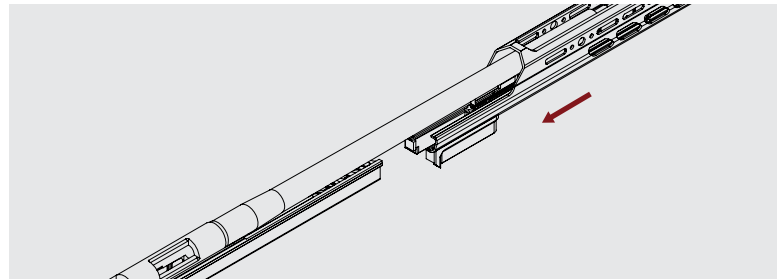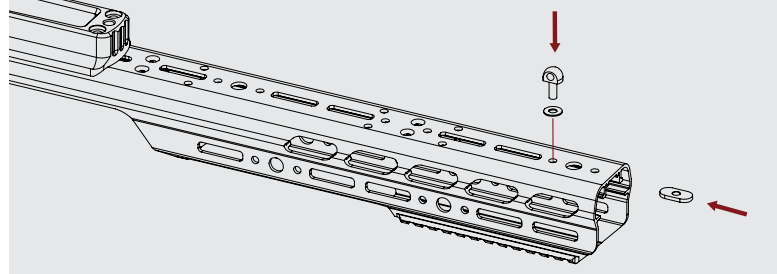

Forend Mounting points:

MOE L2 RAIL AND QD SLING PLATE HOLE SPACING

1.190"

RECTANGULAR HOLES ARE MLOK COMPATIBLE

